 




16" OSCILLATING TOWER FAN WITH REMOTE CONTROL

SKU: DCDF9-G1-US
Model: DCDF9

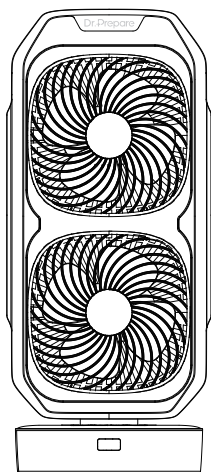

The user manual is meant to offer you a brief walkthrough of the device's features.
Please save the user manual for future reference.

Still need help? Please contact us via support@drprepare.com

➤ User Guide



SPECIFICATIONS

Model	DCDF9
Input	DC 5V2.4A
Speed Setting	Low / Medium / High
Timer	2 / 4 / 8 Hours
Horizontal Oscillatio	120°
Vertical Rotation	250°
Rechargeable Battery	8000mAh
Runtime	12.36 Hours (on Low, with Oscillation off) 3 Hours (on High, with Oscillation on)
Size	7.01 x 4.06 x 16.06 inch

PACKAGE INCLUDES

- 1 x Tower Fan
- 1 x Remote Controller
- 1 x Power Adapter
- 1 x Charging Cable
- 1 x User Manual

  IDENTIFYING PARTS

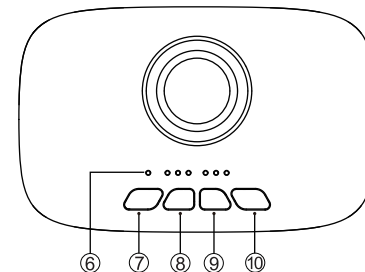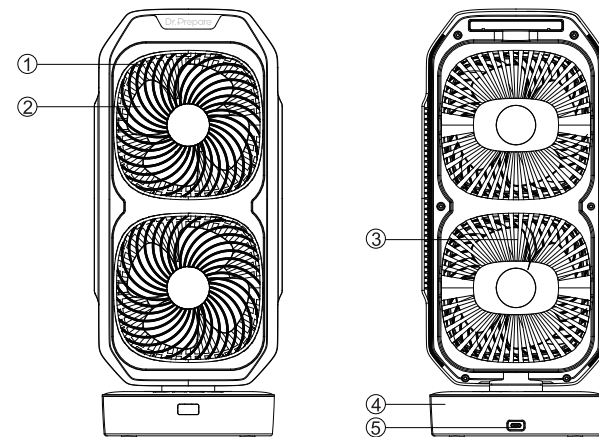

- ① Front grilles
- ② Blades
- ③ Back grilles
- ④ Pedestal
- ⑤ USB-C input port
- ⑥ Indicator lights
- ⑦ Power
- ⑧ Speed
- ⑨ Timer
- ⑩ Oscillation

INSTRUCTIONS

Place the fan on a firm and level surface before using. You can press the buttons on the fan or use the remote controller to set the fan.

1. Press the Power button to turn on the fan.
2. Press the Speed button to adjust the wind speed.

Press Speed button once	Low speed
Press Speed button twice	Medium speed
Press Speed button for three times	High speed

3. Timer settings

Press Timer button once	2 Hours
Press Timer button twice	4 Hours
Press Timer button for three times	8 Hours
Press Timer button for four times	Turn off the timer

4. Oscillation

Press Oscillation button once	Start oscillation
Press Oscillation button twice	Stop oscillation

 
5. Indicator lights

- The Power indicator light will stay on blue when in use. The blue light will flash when the battery is low. When charging, the Power indicator light will flash in green. When finish charging, it will stay on green.
- Press and hold the Oscillation button for 2-3 seconds to enter sleep mode. All the indicator lights will go out. Press any button to return to normal use.

6. Remote Control

Power:
Press the Power button to turn on/off the fan.

Timer:
Set your tower fan to turn off after 2, 4 or 8 hours.

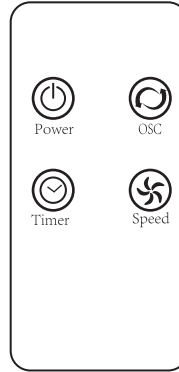


OSC:
Press the OSC button to start or stop oscillation.


Speed:
Choose from 3 speed settings, including Low, Medium and High.

- Please remove the battery pull tab before first use.
- Replace the battery with the same type (CR2025 lithium battery included), making sure the battery is installed correctly.

 MAINTENANCE

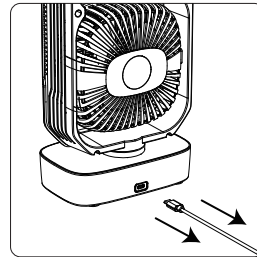

 1. Ensure the fan is turned off and unplugged before cleaning and maintenance.

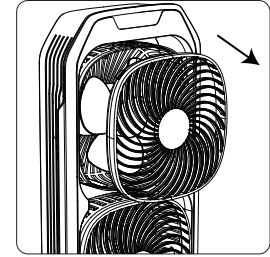

2. Remove the front grilles.
3. Use a soft cloth to gently wipe off the dust. Then put the grilles back.
4. For detailed guidance, please subscribe to our YouTube channel: Dr.Prepare.

WARRANTY

- Dr.Prepare products are covered by a 12-month limited warranty from the original purchase date. If any problems occur, please contact our support team.
- We only provide after-sales services for products that are sold by Dr.Prepare or retailers and distributors authorized by Dr.Prepare. If you have purchased your unit from other channels, please contact your seller for more information about return and warranty.

SUPPORT INFORMATION

- Need help? Feel free to send us an email at support@drprepare.com
- Want to see more products? Visit our website drpreapre.com