

WARRANTY

- Dr.Prepare products are covered by a 12-month limited warranty from the original purchase date. If any problems occur, please contact our support team.
- We only provide after-sales services for products that are sold by Dr.Prepare or retailers and distributors authorized by Dr.Prepare. If you have purchased your unit from other channels, please contact your seller for more information about return and warranty.

CUSTOMER SUPPORT

- If you have any questions or concerns, please send us an email at support@drprepare.com



10" RECHARGEABLE CAMPING FAN

SKU: DCF-1BK35



The user manual is meant to offer you a brief walkthrough of the device's features. Please save the user manual for future reference.

Still need help? Please contact us via support@drprepare.com

User Guide

IDENTIFYING PARTS



- ① Grilles
- ② Fan blades
- ③ LED light
- ④ On/Off switch for light
- ⑤ Dial switch for fan
- ⑥ Indicators of fan speeds
- ⑦ Battery indicators
- ⑧ 5V/1A USB-A output port
- ⑨ 5V/3A DC input port
- ⑩ Handle

SPECIFICATIONS

SKU	DCF-1BK35
Size (L x W x H)	13.78 x 10.24 x 16.54 inch / 35 x 26 x 42 cm
Diameter	10.08 inch / 25.6 cm
Net weight	4.63 lb / 2.1 kg
Speed	Level 1 (the lowest) - Level 4 (the highest)
LED light	Low, Medium, High
DC input	5V/3A
USB-A output	5V/1A
LED	1W-3W

Battery	Li-ion 18650, 14400mAh, 3.7V
Runtime (Fan Only)	4.4 (Level 4) - 12.7 (Level 1) Hours
Runtime (Light Only)	19.5 (High) - 80.4 (Low) Hours

OPERATION

1. Rotate the dial switch to adjust fan speeds (from Level 1 to Level 4) and the indicators on the left will light up accordingly.
2. Press the button on the dial switch and you can turn on the LED light. Press the button again to switch among 3-level light intensity.
3. You can tilt the fan for up to 270 degrees to direct the airflow to the place you want.
4. The indicators on the right show the real-time battery capacity (25%, 50%, 75%, and 100%). Please recharge your fan in time when the battery is low. You can use the fan while it is recharged.

CAUTION

1. Please charge your fan every 3 months for an extended lifespan.
2. DO NOT insert fingers or foreign objects into the grilles to prevent injuries. Only under the supervision of adults can children use the fan.
3. DO NOT disassemble or modify the fan.
4. Keep the fan away from fire or wet.