 


TOWER FAN

D-F002




▶ Manual

SPECIFICATIONS

Model	D-F002
Rated voltage	100-120V
Rated frequency	50-60Hz
Rated power	16W
Timer	2 / 4 / 8 Hours
Speed settings	Low / Medium / High
Oscillation	110°
Size	5.4" (diameter) x 12.8" (height)
Net weight	1.96 lb / 890g

IDENTIFYING PARTS

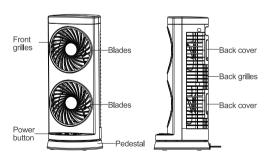

FEATURES

- Dual fans with oscillating design direct stronger airflow to larger areas.
- A brushless motor ensures much quieter and smoother airflow around your room.

INSTRUCTIONS

- Place the fan on a firm and level surface before plugging it into a wall outlet.
- 2. Press the Power Button to turn on the fan.

Press Power Button once	Low speed
Press Power Button twice	Medium speed
Press Power Button for three times	High speed
Press Power Button for four times	Turn off

3. Timer settings.

Press Timer Button once	2 Hours
Press Timer Button twice	4 Hours
Press Timer Button for three times	8 Hours
Press Timer Button for four times	Turn off the timer

4. Oscillation.

Press Oscillation Button once	Start oscillation
Press Oscillation Button twice	Stop oscillation

WARNING

- Please do not plug the fan into an outlet other than
 100-120V, 50-60Hz in case of damages to the built-in
 motor
- 2. Do not put fingers or other objects into the grilles.
- 3. Unplug the cord before maintenance.
- 4. Prior to the maintenance, loose the screws of the front grilles and disassemble the grilles by rotating them counterclockwise. Then you move on and clean up the fan.
- 5. Do not use water and other liquids to rinse the fan. Gasoline and other corrosive solutions are forbidden during the maintenance. Use soft cloth with neutral detergent only to clean the fan.
- 6. Wait until the fan is completely dry to plug it in for use.
- If you do not use the fan for long terms, store the fan in a cool, dry place after unplugging the cord.