




Dr. Prepare

CERAMIC HEATER

Model: DP-0CH01

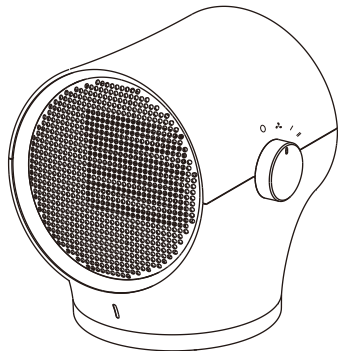

➤ **Manual**

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, these instructions and warnings should always be followed to reduce the risks of fire, electric shocks and injuries to people.


1. Read all instructions before using the heater.
2. Do not insert or allow foreign objects or fingers to block air intakes or exhaust opening.
3. Children aged 8 years and above should be supervised to ensure that they do not play with the appliance. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
4. Unplug the heater before cleaning and maintenance. The heater is not intended for use in wet or damp locations. NEVER place the heater in or near water. DO NOT IMMERSE HEATER IN WATER.
5. Do not plug multiple devices in the same outlet or on the same circuit as the heater. DO NOT use the heater with an extension cord or on a movable socket.
6. Unplug heater by gripping the plug body and pulling it out from the wall outlet. NEVER PULL BY THE CORD.

7. Please contact a qualified electrician to repair the damaged cord in case of potential hazard.
8. Do not let the heater operate when it is left unattended for long periods of time. (e.g. several weeks in a summer cottage.)
9. Do not use accessories that are not recommended or sold by Dr. Prepare and its authorized distributors.
10. Faulty connection between the heater plug and the wall outlet may cause the plug to overheat. Be sure that the heater plug fits tightly into outlet before each use.
11. The heater is intended for residential use only. DO NOT use the heater outdoors.
12. Be sure that the heater keeps its distance from the wall outlet. Do not place the heater right below the outlet.
13. Do not cover the heater with rugs or other similar coverings as this may cause the heater overheat.
14. The heater is not intended for use in bathrooms, laundry areas, or similar indoor locations.
15. Do not throw away the appliance with the normal household waste, but hand them in at an official collection point for recycling. For disposing this appliance in an environmentally-friendly way, please contact your local waste service provider.
16. CAUTION - the heater is HOT when in use. To avoid burns and fire, please keep the heater away from children and combustible materials.


WARNING: DO NOT COVER THE HEATER TO PREVENT OVERHEATING.

IDENTIFYING PARTS

Front

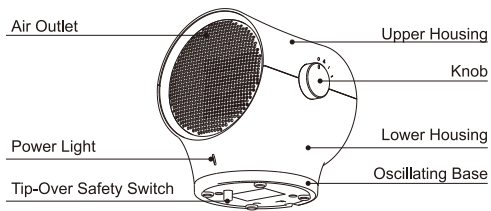

Back

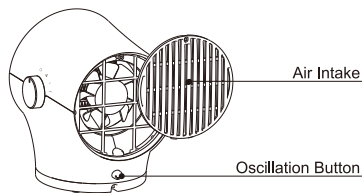

OPERATION

1. Always place the heater on a stable, flat, level surface when it is operating. Keep the wall outlet and combustible materials such as furniture, drapes, or plants at least 3.3 feet (1 m) from the heater.

2. Make sure the knob is in the "0" (OFF) position before plugging the heater in. Then plug the heater into a wall outlet rated 100-120V~, 50-60Hz.

3. Turn the knob clockwise to the desired setting. The power light will remain lit until the heater is unplugged from the wall outlet.

☪ for Fan Only (No Heat)
(I) for Low Heat
(II) for High Heat

4. Press the oscillation button on the back and the heater can oscillate horizontally within 60 degrees.

5. To adjust from High Heat to Low Heat, turn the knob anticlockwise. To turn the heater off, turn the knob to 0 (OFF) position and unplug the heater from the wall outlet.

SAFETY FEATURES

1. A thermal overload protector is built in to prevent overheating or malfunction. If an overheat temperature is reached, the heater will be automatically shut off. The heater will only resume once it cools down.

2. A tip-over switch at the bottom can disable the heater if it is tipped accidentally. If tipped over, the heater should be set upright and then it will resume working.

3. One of the common causes of overheating is that the dust or fluff is gathered inside the heater over time. Please unplug the heater and vacuum the air intakes and the air outlet regularly.

4. Please contact customer service if the heater overheats or malfunctions all the time.

CLEANING AND MAINTENANCE

1. Turn the heater OFF and unplug it. Allow it to cool down before cleaning.
2. Clean the external surfaces of the heater regularly using a cloth moistened (not dripping wet) with water and mild detergent. Use a dry cloth to wipe off excessive moist before using the heater.
3. No need to lubricate the fan motor as it has been lubricated during the production.
4. Clean the heater following the steps mentioned above. Place the heater in its original box and store it in a cool, dry place.

NOTE: This portable heater is designed for spot personal heating or as supplementary heating.

NOTE: The heater may give off smoke or odour on its first use, implying that a drop of oil fell on the heating element during the manufacturing process. The oil will evaporate quickly and will not recur.

PRODUCT SPECIFICATIONS

Model	DP-0CH01
Power	1000W
Net Weight	2.3 lb
Voltage	100-120V~
Frequency	50-60Hz
Size	6.4 x 6.0 x 7.2 in