


- C. Unplug the dryer when it has malfunctions (abnormal sound, smells, over-heating, and smokes, etc.).
- D. Please set the drying timer according to types and dampness of footwear.
- E. The default running time of the ozone feature is 20 minutes. If you want to use this feature after 20 minutes, please press the OZONE button again.

5. Wiring Diagram

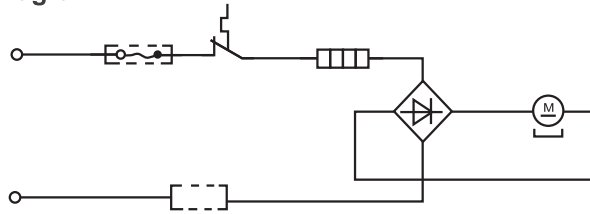

6. Warnings

1. Please check condition of the cord before using the dryer to prevent electric shocks and potential fire hazards.
2. Plug the shoe dryer into a 100-120V ~ 50-60Hz AC outlet.
3. Please unplug the shoe dryer when it is not in use.
4. **DO NOT EXPOSE** the shoe dryer to direct sunlight and other heat sources to prevent discoloration or other damages.
5. **DO NOT USE** the dryer on carpets or other rough surfaces.
6. Keep the dryer away from liquids.
7. **DO NOT** smash, squash, or drop the shoe dryer.
8. **DO NOT USE** the dryer upside down.
9. Keep the dryer away from sands, stones, and other debris.
10. **DO NOT COVER** the vents at the base of the dryer.
11. Keep the dryer away from combustible materials like paper, fuel, etc.
12. Keep the dryer out of reach of children.

7. Additional Information

For any questions or concerns about this product, please send us an email at dpcustomersupport@163.com.

BOOT & SHOE DRYER

INSTRUCTIONS

READ INSTRUCTIONS BEFORE THE FIRST-TIME USE



Dr. Prepare boot & shoe dryer is designed to effectively remove wet, sweat, and odors from footwear and gear. With optimal circulation, this dryer not only works great with shoes / boots of most sizes, but gloves, socks, and other accessories as well.

1. Identifying Parts



- ❶ Air vent
- ❷ Indicator
- ❸ Left drying tube
- ❹ Right drying tube
- ❺ LED screen
- ❻ Time -
- ❼ Time +
- ❽ Vents (for dissipation)
- ❾ DRYING button
- ❿ Base
- ⓫ Button to fold / unfold drying tubes
- ⓬ TIMER button
- ⓭ OZONE Button

2. Specifications

Voltage	100-120V ~ 50-60Hz
Power	200W

Temperature	104 °F-122 °F
Timer	99minutes

3. Timer Settings

Sneakers	Approximately 20 minutes
Boots	Approximately 20 minutes
Leather shoes	Approximately 15 minutes

4. Operations

1. Put the dryer on dry and flat floor.
2. Long press the bracket button and unfold the brackets.
3. Plug the shoe dryer into a 100-120V, 50~60Hz AC outlet.
4. Operations:

Method 1: press the DRYING button to activate the dryer instantly. The default drying timer is 20 minutes. After 20 minutes, the shoe dryer automatically stops working.

(**Note:** if you want to eliminate odors, press the OZONE button after pressing the DRYING button. This feature will automatically stop after 20 minutes.)

Method 2: press the DRYING button to activate the dryer instantly. Press “TIME+” or “TIME-” button to set drying timer (max. 99 minutes). When the drying timer expires, the shoe dryer stops working.

(**Note:** if you want to eliminate odors, press the OZONE button after pressing the DRYING button. This feature will automatically stop after 20 minutes.)

Method 3: press “TIME+” or “TIME-” button to set an activation timer (max. 24 hours). Then press “TIMER” button and the digits on LED screen blink. Now press “TIME+” or “TIME-” button to set a drying timer (max. 99 minutes). The shoe dryer and its ozone feature will be activated automatically at the same time when the activation timer expires. The ozone feature will shut down 20 minutes later and the dryer will stop working when the drying timer expires.

(**Note:** if you want to reactivate the ozone feature after 20 minutes, please press the Ozone button again and it will work for another 20 minutes.)

5. To quit drying shoes, press the DRYING button.

NOTES:

- A. Activation timer: it is set to start the dryer working at a particular time; Drying timer: it is set to stop the dryer working at a particular time.
- B. Be careful of heat when removing shoes from the shoe dryer.