




Dr. Prepare


PORTABLE TRIPOD FAN

SKU: DHF-1BKHF3-US

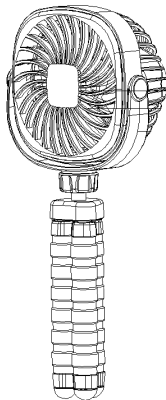

» User Guide

IDENTIFYING PARTS

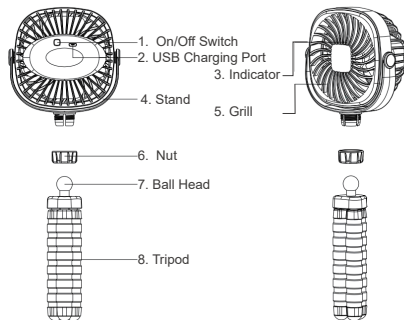


SPECIFICATIONS

Name	Portable Tripod Fan
Size	4.7x2.4x10.8 inch
Net weight	8.3 oz
Rated voltage	DC5-9V
Rated current	≤0.16-0.30A
Power	0.8W~2.7W
Speed	2500~3800±10%RPM
Battery	Li-ion Battery (3.7V, 2200mAh)
Battery life	2~5 Hours

OPERATIONS

1. Take out the fan, nut, and the tripod from the packaging. Place the nut at the top of the tripod and screw the fan onto the tripod. Then tighten the nut to hold the fan steady.

Note: Make sure the ball head fit into the nut from the smaller hole.

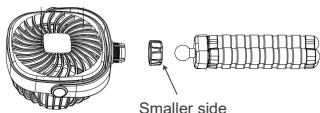

2. You can adjust the tripod to use it as a stand for supporting the fan; or you can bend the tripod to fasten the fan to a car seat, etc.
3. Press the On/Off switch and the blue indicator lights up. The fan now is at Low speed. Press the power button repeatedly to change speed settings. When the fan operates at High speed (Level 3), press the power button and the fan will turn off.
4. The blue indicator starts blinking when the battery is low (less than 20%), indicating the fan needs a recharge. When the battery percentage is less than 5%, the fan will shut off automatically. Please recharge your fan in time when the blue indicator flashes.
5. The indicator turns red when the fan is being recharged. If the indicator turns green and stays lit, the battery is fully charged.

WARRANTY

- Dr.Prepare products are covered by a 12-month limited warranty from the original purchase date. If any problems occur, please contact our support team.
- We only provide after-sales services for products that are sold by Dr.Prepare or retailers and distributors authorized by Dr.Prepare. If you have purchased your unit from other channels, please contact your seller for more information about return and warranty.

CUSTOMER SUPPORT

- If you have any questions or concerns, please send us an email at support@drprepare.com