

# ELECTRIC HEATED VEST

Model: DHV07

## CAUTIONS

- You can power the heated vest via two charging ports, one is the USB port, and the other is the round DC port. **It's recommended to power the vest with the round DC port.**
- Heating temperatures vary when connecting to different ports. Please use the recommended port to get warm quicker.



**Port 1**

Round DC Port – diameter 3.8 mm  
Input Voltage & Current: 7.4V / 2.3A

- When connecting to this port, the vest heats up faster, and you can feel the warmth much quicker when you're cold.

**Port 2**

Conventional USB Port  
Input Voltage & Current: 5V / 2A

- Compared to powering with the round DC port, when powering with the USB port, the vest heats up relatively slowly, and its temperature is slightly low. Works with those power banks with an output of 5V / 2A on the market.
- Get one power bank in the proper size and weight for your heating apparel, or else, you may feel uncomfortable if the power bank is big and heavy, as it locates in your inner pocket. Dr.Prepare sells lightweight power banks of high portability and versatility that are perfect for your heating apparel. Please consult our customer service team for more details, you'll get what you need.


## PRODUCT SPECIFICATIONS

Model No.	DHV07	
Input	DC Port: 7.4V / 2.3A	USB Port: 5V / 2A
Filling	100% Polyester	
Outer Shell	Nylon	

## HEATING LEVELS

Levels	Temperature	Indicator Light
High	65 °C / 149 °F	Red
Medium	55 °C / 131 °F	White
Low	45 °C / 113 °F	Blue

## 2 CONTROL BUTTONS – 3 HEATING OPTIONS

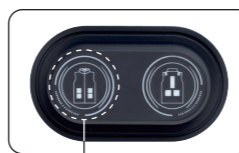

1). Press and hold this button for 2s to start heating, then you'll feel the **heat around your neck and belly.**



2). Press and hold this button for 2s to start heating, then you'll feel the **heat around your shoulders, rear back, and waist.**

3). The heating function of the two parts mentioned previously (**heat around your neck, belly & heat around your shoulders, rear back, waist**) can also be turned on at the same time and work together. Then you'll feel upper-body warmth instantly.

## INSTRUCTIONS

- Unzip the inner pocket, and connect the power bank to the vest's integrated cable.
- Switch on the power bank, then the vest's two control buttons' light will cycle through red >> white >> blue briefly.
- In the standby state, press the button again to change the heating levels. Every time you press the button, the heating levels will cycle through High >> Medium >> Low >> High, and the light will cycle through Red >> White >> Blue >> Red.
- Press and hold the button for 2 seconds again, the vest stops heating.

## CARE & MAINTENANCE

- Before washing, remove the power bank, put the integrated cable back into the pocket, and zip the pocket tight.
- To ensure the maximum lifespan of your heated vest, please **put the vest in a laundry bag for machine washing.**
- Do not clean the vest by rubbing it hard. Simply wash the vest with neutral detergent, not acidic detergent.
- Drip dry the vest in cool and well-ventilated places. When not in use, fold and store the vest until it cools down.

## WARNING

- Do not keep the integrated cable connected to the power banks if you do not plan to use it for a long time.
- Never use the vest when it's wet. Once it is wet or moist with water splashes, switch off the heating and stop using it immediately.
- Do not wear the vest over your bare skin. As heated vests are primarily designed as a mid-layer piece.

- Keep out of heat resources. Do not expose the vest to rain or wet conditions. Water entering the vest may increase the risk of electric shock.
- Do not use the vest if the switch doesn't function. Any vest that cannot be controlled with the switch is dangerous and must be repaired.
- The appliance is not to be used by young children unless the controls have been pre-set by a parent or guardian, or unless the child has been adequately instructed on how to operate the controls safely.
- Should not be used by users unable to feel temperature changes.
- The given temperature varies depending on ambient temperature and conditions. And the duration varies depending on different power banks' capacity and brands.

## WARRANTY

- Dr.Prepare products are covered by a 12-month limited warranty from the original purchase date. If any problems occur, please contact our support team.
- We only provide after-sales services for products that are sold by Dr.Prepare or retailers and distributors authorized by Dr.Prepare. If you have purchased your unit from other channels, please contact your seller for more information about return and warranty.

## CUSTOMER SUPPORT

- If you have any questions or concerns, please send us an email at [support@drprepare.com](mailto:support@drprepare.com)



Name: Sea&Mew Accounting Ltd  
Address: Electric Avenue Vision 25, London, Enfield EN3 7GD  
Contact Person: Billy Han  
Tel: +44 7399648608  
E-mail: [info@seamew.net](mailto:info@seamew.net)



Name: Sea&Mew Consulting GmbH  
Address: Mittenhuber Straße 4, 92318 Neumarkt  
Contact Person: Yuan Li  
Tel: +49 15224685061  
E-mail: [Compliance.EU@outlook.com](mailto:Compliance.EU@outlook.com)

Manufacturer / Importer: Dr Prepare Global Limited  
Address: HK, 999077, HONGKONG, CANTON RD TST KLN, RM 803 LIPPO SUN PLAZA 28  
Contact Person: Michelle Guo  
Tel: +86 152 6258 8612